

VENTO[®] COUNTER

www.ventotent.pl

MOUNTING KIT



x 1

two stroke
hand pump



x 1

repair kit

 
VALVES.

PREPARATION:

A - protective cap B - valve thread C - valve position




Inlet valve - closed



The valve is ready for pumping.

 Only the top cap (A) is screwed
on for pumping.




Valve completely unscrewed.

Air will be released
completely.



Safety valve

 ASSEMBLY INSTRUCTIONS



The valve is ready for pumping


1 Open the zipper on the transport bag. Take the product out on a clean and stable surface.

2 Prepare the valve for pumping. If the valve is unscrewed, screw the valve thread (B) into the base (C) in both air modules (the valves are located in their center).

3 Insert the end of the hand pump* into the valve and start filling the counter with air. Inflate the product to the desired volume.

The pressure is regulated by a safety valve. The safety valve is located on the side.

The pumping limit will be indicated by the sound of air coming from the safety valve.

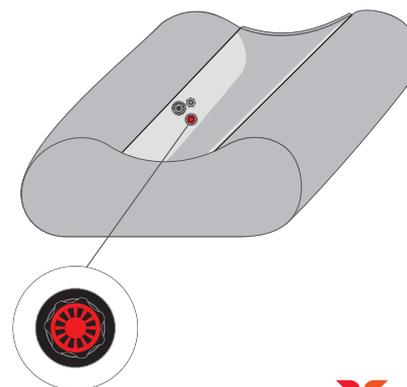


* Optionally a dedicated electric pump


VENTO[®] COUNTER

www.ventotent.pl


ASSEMBLY INSTRUCTIONS

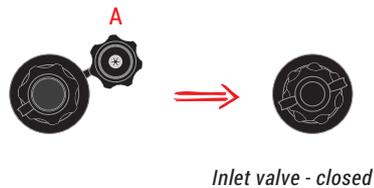

- 4** Tighten the cap (A) of the inlet valve and put the counter in an upright position

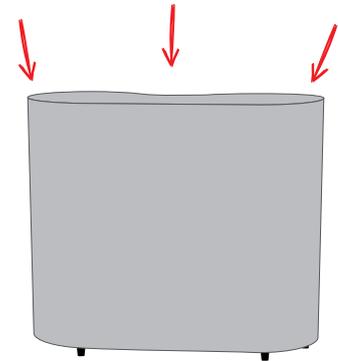

- 5** After placing the product vertically, check the position of the countertop and counter sheathing. If necessary, center the cover in relation to the top.

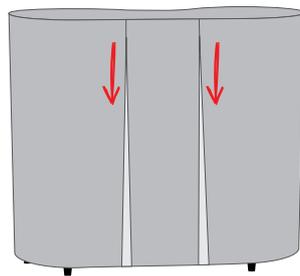

- 6** Slide the zippers on the cover and you can start using the counter.

-
- 7*** Installation of optional weights (balancing plates):
- Place the balancing plate on the feet at the base of the counter. Repeat the operation for the installation of the second plate.
 - Turn the plates vigorously to ensure that it sticks to the base firmly.

DISASSEMBLY INSTRUCTIONS

- 1** Open the inlet valve and deflate both inserts

- 2** Do not disassemble the counter top! Fold everything up and put it in a cover.